

EWD-H-XJ4

USER' S GUIDE (V2.2)

Xi'an Excellent Electromechanical Co., Ltd.

Technical File of the EWD-H-XJ4 Intelligent Elevator Load Weighing Device [User's Guide]

Table of Contents

Product Overview	1、Product Appearance, inner structure and interface directions	Page 2
	2、Exterior dimensions and installing diagram	Page 3
Installation & Adjustment	3、System Adjustment and directions	Page 4
Implication and Adjustment Method of the Operation Parameters	4、System Parameters Adjustment	Page 6
	5、Explanation of the Meaning of Parameter P	Page 7
Indicating Code Explanation	6、Explanation of System Normal Operation Code	Page 9
	7、Explanation of other displaying	Page 10
How To Do?	8、Brief introductions of conditions	Page 11
	9、How to do setting adjustment of an elevator with the known “no load→rated load”compressing deformation?	Page 12
	10、How to repeat the Autotune operation for the system?	Page 12
	11、How to modify the system output conditions after Autotune ?	Page 12
	12、How to use 20% rated load autotune?	Page 12
	13、Car shock rubber compression exceeds the sensor detection range	Page 12
	14、On the use of "load increase, away from" working methods of operation	Page 12
	15、Working principle of“EWD-H-XJ4”elevator weighing device	Page 13
System Characteristics	16、Main Properties	Page 13
	17、Technical Items	Page 14
Promise		Page 15
Others		Page 15


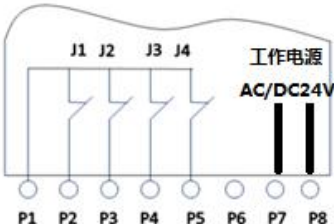
Attention: This system is applicable an elevator with 「**moveable car platform**」.Before use, please read the following content carefully.
The Inductive magnet is specially-made rare-earth magnet for this product with strong magnetic force. Special care should be taken during installation. Under no condition should it be away from the high temperature above 100°C to avoid demagnetizing and the equipment damage and personal hurt from this is beyond our responsibility.

Notice: Our part is just responsible for the products quality in the guarantee period under any condition.


Declaration: Our company reserves the right of changing products for technical improvement and the related technical parameters should be referred to the USER’S GUIDE along with the products.

Product Overview

1、 Product Appearance, Interior Structure and Interface Directions:


EWD-H-XJ4		
Appearance		<div>Interior Structure</div> 
Interface Directions	P1	Com
	P2	J1
	P3	J2
	P4	J3
	P5	J4
	P6	None
	P5 P6	System Power Source: DC/AC24V(±10%) / 150mA Absolutely not to connect the output terminals of this device except“P7、 P8”to exterior power source directly, and the permanent damage from this is beyond our responsibility.
	<div><div>1. J1~J3 are interior solid state relays with Max. loading capacity of DC/AC 32V/50mA.</div><div>2. To be programmed as “no load~over load”output signal to participate in elevator logic control.</div></div>	

2、Exterior Dimensions & Installing Scheme

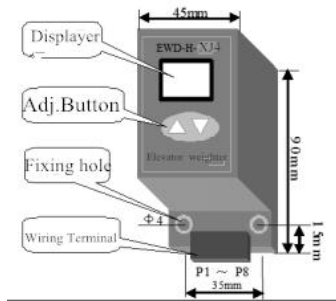Exterior Dimension		<div>Notice on Installation</div> <div><div>1. Install this device as near as possible to the center of elevator car platform or the original place of elevator overload switch. The system should be installed on the bottom bearing beam of elevator car platform with the inductive magnet adhering to the moveable car platform and the marking surface facing to the inductive point of the weighing device.</div><div>2. The system supporting frame should be made according to elevator concrete situation with the uneasily deforming material of thickness more than 4mm or with enforcing plate to avoid swaying.</div><div>3. Adjust this device so that the car platform magnet aiming to the center point of its upper section. Meanwhile, assure that the section of this device parallel to that of the magnet.</div></div>
Installing Method	<div><div>注意：系统连接支架需要用户根据具体情况自制</div><div>图</div><div><div>活动轿</div><div>感应磁</div><div>检测间</div><div>称重装</div><div>连接支</div><div>电梯下承重</div></div></div>	

3、System Adjustment and Directions

① System Positioning Operation:

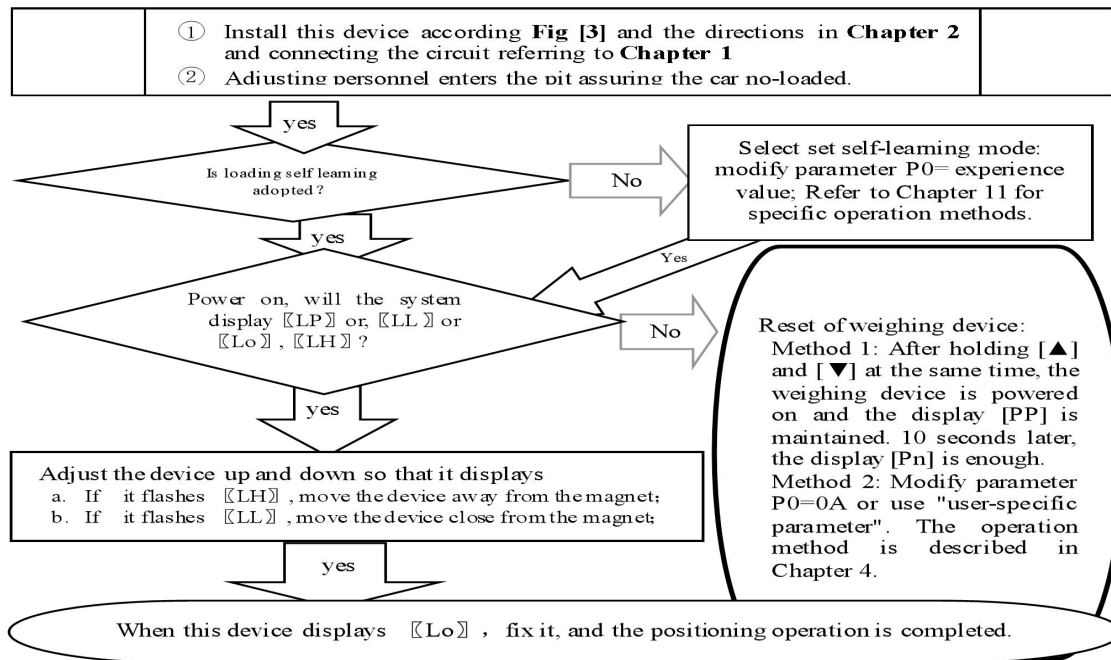

② No load and Rated Load Operation Parameters for Autotuning:

When displaying [Lo], press [▲] and [▼] simultaneously, the system will start no-load operating parameters autotuning. When [PL] is displayed aglimer for 5s, it is the end of no-load autotuning.

yes

System will automatically enter the condition of rated-load autotuning. Displaying [PH] means the ready condition of rated-load autotuning

yes

1. Displaying [PH] means put elevator in the condition of rated-load.
(eg: for elevator with RL=1000Kg, load 1000Kg);
2. Press [▼] system will begin RL parameters autotuning.
Displaying [PH] aglimer for 4s, system will reset automatically.

yes

Displaying [L4] means the end of RL operating parameters autotuning.

yes

By the way of setting

Displaying [L0] means the end of RL operating parameters autotuning

yes

By now, system RL autotuning is finished. System will enter normal operation condition. For the meaning of displaying code, please refer to **Chapter 6**

③ System Adjustment under other conditions:

For the following reason, it is necessary to modify the operating parameters of this device.

- ①For elevator car decoration change, the dead weight of the moveable car platform changes;
- ②The car platform appears mechanical deformation;
- ③The temperature difference between winter and summer has an unneglecting effect on the elastic coefficient of car platform damping rubber;
- ④The car platform appears damping rubber appears aging or deforming;
- ⑤The elevator overruns at the top or at the bottom;
- ⑥The weighing device becomes slack at the fixing end.

Operation Parameters Adjustment and the Implication

4、System Operation Parameters Adjustment (Annotation: * represents for a hexadecimal value of “0~9,A~F”.)

- ①Simultaneously press **【▲】** and **【▼】** on system control keypad to power on , this moment **〔PP〕** will be displayed aglimer, that means entering operation parameters modifying status.
- ②Release **【▲】** and **【▼】** buttons, system will display **〔P*〕** and **〔**〕** alternately. **〔P*〕** is an indication of system operation parameters; **〔**〕** is the interior data value of **〔P*〕** .
- ③When displaying **〔P*〕** , press **【▼】** , indication of system operation increases; press **【▲】** , indication decreases.
- ④When displaying **〔**〕** , press **【▼】** , data value increases; press **【▲】** , data value decreases.
- ⑤Release buttons, system displays operation indication and configuring data alternately.
- ⑥To modify other configuring datum, repeat the operation in item 3, item 4, item 5.
- ⑦At the moment when system displays **〔P*〕** , Simultaneously press **【▲】** and **【▼】** , system will save modified datum for future use. This moment, system displays **〔Pn〕** for 1 second. System operation parameters modification of this time is completed.

Example: Modify parameter P2 to 16;

- ①Simultaneously press **【▲】** and **【▼】** on system control keypad to power on , this moment **〔PP〕** will be displayed aglimer, that means entering modifying status.
- ②Release **【▲】** and **【▼】** buttons, system will display **〔P0〕** and **〔**〕** aglimer

Technical File of the EWD-H-XJ4 Intelligent Elevator Load Weighing Device [User's Guide]

- ③When displaying [P0], press [▼] to increasing it to [P2];
- ④Release button [▼], system alternately displays [P2] and [**];
- ⑤When displaying [**], press [▲] and [▼] to regulate its value as [16];
- ⑥Release button, system alternately displays [P2] and [16];
- ⑦At the moment when system displays [P2], Simultaneously press [▲] and [▼], system will save modified datum for future use. This moment, system displays [Pn] for 1 second. System operation parameters modification is completed.

5、Implication of parameter P:

①Directions of Parameter P0 [System Operation Mode]:

Setting	Explanation	Default Setting	Normal Value
00	Normal Operation	01	00 This value will be modified in the course of autotuning.
01	Sensor installing positioning, system no-load and rated-load autotuning operation.		
02	Specifying system no-load autotuning operation.		
03	Specifying system Rated-load autotuning operation.		
04	Select “20% rated load”autotuning operation, being convenient for users special adjustment.		
25~99 ×0.1mm	For elevator with known “no-load→rated-load”compressing moveable car platform damping rubber pad, it may be set manually. The system may be put into use after system installation positioning. (This adjustment is very convenient for elevator manufacturers. For more detail, refer to Chapter 10.)		

②Directions of Parameter P1

Setting	Explanation	Default Setting	User Setting
00	0-Cascade output mode	00	User needn't to modify

③Directions of Parameter P2 [Light-load parameter setting]:

Setting	Explanation	Default Setting	User Setting
00~30	Light-load signal output	05	

Technical File of the EWD-H-XJ4 Intelligent Elevator Load Weighing Device [User's Guide]

④Directions of Parameter P3 [Half-load parameter setting]:

Setting	Explanation	Default Setting	User Setting
P2+1~60	Half-load signal output	30	

⑤Directions of Parameter P4[Heavy-load parameter setting]:

Setting	Explanation	Default Setting	User Setting
P3+1~90	Heavy-load signal output	70	

⑥Directions of Parameter P5 [Full-load parameter setting]:

Setting	Explanation	Default Setting	User Setting
P4+1~99	Full-load signal output	90	

⑦Directions of Parameter P6 [System overload coefficient]:

Setting	Explanation	Default Setting	User Setting
00~20	Rated-load+(rated-load ×P6) %, Output overload signal	05	

⑧Directions of Parameter P7 [Operation Status setting of Solid state relay “J1”]:

Setting	Explanation	Default Setting	User Setting
00	No-load dynamic output	00 (No-load Dynamic Close)	

⑨Directions of ParameterP8 [Operation Status setting of Solid state relay “J2”]:

Setting	Explanation	Default Setting	User Setting
00~1F	Half-load dynamic output	02(Half- load dynamic close)	

⑩Directions of Parameter P9 [Operation Status setting of Solid state relay “J3”]:

Setting	Explanation	Default Setting	User Setting
00~1F	Full-load dynamic output	04(Full-load dynamic open)	

11.Directions of Parameter PA : [Operation Status setting of Solid state relay “J4”]

Technical File of the EWD-H-XJ4 Intelligent Elevator Load Weighing Device [User's Guide]

Setting	Explanation	Default Setting	User Setting
00~1F	Over-load dynamic output	0F(Over-load dynamic close)	

12.Directions of Parameter D [Displacement-expanding Setting]:

Setting	Explanation	Default Setting	User Setting
01	Displacement approach, 10mm effective	01	

Note:① If the setting value is not specified, the weighing device will not work normally.

② During the regular maintenance of the elevator, the self-learning work of the weighing device should be carried out again.

Explanation of Displaying Code:

6、System Normal Operation Code: (“W”is the present effective load)

Display Code			Indication	
System displays [L*]	L0	No-load car	Output No-load signal	Output no-load signal
	L1	Light-load car	Output Light-load signal	Output Light-load signal
	L2	Semi-load car	Output Haff-load signal	Output Hall-load signal
	L3	Heavy-load car	Output Heavy-load signal	Output Heavy-load signal
	L4	Rated-load car	Output Rated-load signal	Output Rated-load signal
	LF	Over-load car	Output Over-load signal	Output Over-load signal
<p>① Press and hold the [▲] button, if the weighing device displays [4.7], it means that the maximum compression deformation of "no-load to rated-load" at the bottom of the elevator car is "4.7mm", which can be memorized by the user for future use;</p> <p>② Press and hold the [▼] button weighing device will display the load variable of the current moving car bottom. If shown, [1.2] indicates that it has been compressed by "1.2mm" since "no load".</p>				
For user to save: the code of this elevator			Rated-load compression variable:mm	

7、Code for Other Operation and Failures

	Display Code	Indication	Solution
--	--------------	------------	----------

Technical File of the EWD-H-XJ4 Intelligent Elevator Load Weighing Device [User's Guide]

	Display Code	Indication	Solution
1	YS	System Startup	
2	Pc	System Resetting	
3	PP	Get into the status of operation parameters modification	
4	PL	Self-learning no-load parameter (static display indicates ready state, flashing display indicates complete detection)	
5	PH	Self-learning rated-load parameter (static display indicates ready state, flashing display indicates complete detection)	
6	LL	Installation and positioning	Too big Positioning
7	LH		Move this device closing to the magnet
8	Lo		Too small Positioning
9	LP		Move this device away from the magnet
10	P*	Accurately Position	
11	Pn	Interior Auto Correction	
12	EA	System Configuration Indication	
13	EJ	Saved	
14	ED	Saving Failure	Modify the operation parameters
15	EC	Without this system setting	Check system setting value
16	EH	Car platform deformation deficient	Affirm elevator in the condition of rated load
17	EL	Car platform deformation overflowing	Damping rubber is too soft, adjust PD
		Incorrect installation place of the magnet	Check the magnet installation place
		Incorrect installation place of the magnet	Check the magnet installation place, pay special attention to polarity and distance.

How to do?

8、Brief Analysis of Other Conditions:

①After installation of this weighing device, weighing signal changes in the course of operation?

The elevator load output value is not held after elevator starts, adjust the relative items of the inverter and controller.

②After long-term of operation, system no load zeroing point appears larger deviation?

May be caused by the reason described in section 3,Chapter 3. Set system Autotuning mode to calibrate again

③After the elevator weighing is changed from heavy load to light load, heavy load signal is still displayed?

The movement of the moveable car platform is blocked, it is not reset after pressing. Solute the relevant mechanic problems.

④System output signal doesn't change linearly along with the change of load?

Check the structure of the moveable car platform, pay more attention that there should only be one pair of damping rubber or spring moving relatively to the moveable car platform.

⑤During the system operation, analog output is abnormal or system resetting or speed-regulator cooperation is abnormal?

It may be caused by system power source series interference. Select another group of power to supply the system, or to provide an exterior power of AC/DC 24V/300mA to supply.

9、How to set an elevator with known “no-load→rated load” compression deformation?

For example: The max “no-load→rated load”compression deformation of this elevator is 5.8mm.

- | | |
|-----------|--|
| Operation | <ol style="list-style-type: none">1.Modify“P0=58”and save it. Refer to chapter 5;2.After system restarting, [LP] is displayed. Wait until [LL] , [Lo] or [LH] is displayed;3.When the car is empty, adjust system installation position to make it display [Lo] , fasten it;4.When[Lo]is displayed, press[▲]and[▼]ssimultaneously, system begins to autotune no-load operation parameters;5.After [PL] is display aglimer for 5 second, the whole process of autotuning is finished. |
|-----------|--|

10、How to do Re-Autotune operation for system?

Method 1: Simultaneously press [▲] and [▼] son system control panel to power on. This moment, system aglimer displays [PP] and [P-] .Keep 15 seconds, system will display [Pn] .On that occasion, all operation parameters reset to default settings.

Method 2: Modifying parameter P0=0A or user specified operation code will reset system immediately to default status. But for users with specified code. The method is mentioned in Chapter 5.

11、How to modify output status of a system after autotuning is finished?

Modify the corresponding controlling parameters of parameter P respectively. The method is mentioned in Chapter4.and 5.

12、How to adopt 20% rated load for rated load autotune?

Modify P0=04. After [Lo] positioning and no-load [PL] autotuning, in the period of system displaying [PH] , load 20% of the rated load, press [▼] , system displaying [L1] means the end of adjustment. This is an auxiliary method when 100% autotuning can be done.

13、The compression of car damping rubber exceeds the sensor inspection range?

Before autotuning, be assure to select “PD”=“02/03”and save it. Then, readjusting the installing position of the sensor is OK (See parameter PD for more details).

14、On adopting operation of “load increasing, displacement aloofing” method?

Before autotuning, be assure to select “PD”= “1*” and save it. Then, readjusting the installing position of the sensor is OK.

System Characteristics

15、Working principle of “EWD-H-XJ4” elevator weighing device

With the development of elevator technology, the influence of elevator weighing device on its performance has reached a point that cannot be ignored. Elevator weighing device of high precision, high reliability, multi-function demand is imminent. With the continuous development of sensor technology and microcomputer, the high precision Hall sensor is used to detect the displacement change of elevator car bottom due to the load. At the same time, the single chip microcomputer is used to carry out scientific calculation and processing, so that the device can realize the function of weighing the elevator car payload..

16、Main property

- (1) Working in a contactless and inductive way. No mechanical movement. Solid-state relay outputs. Being directly installed in the original place of overloading switch. No necessity of changing the mechanism of elevator car.
- (2) The whole system is designed in the waterproof structure with small overall size, easy installation and adjustment and simple structure.
- (3) Wide induction range, high accuracy positioning, intelligent temperature compensation making the range of operating temperature wider.
- (4) The inner core consists of Hall sensor of high accuracy and single-chip microprocessor of high efficiency. All parameters may be set on the field.
- (5) Adopting strong inductive magnet, improving the anti-interference capability of the system to the utmost.
- (6) Each set of products undergo a rigorous aging process to ensure reliable work.
- (7)System based on mathematical equations for scientific computing, automatic detection error correction

Technical File of the EWD-H-XJ4 Intelligent Elevator Load Weighing Device [User's Guide]

(8) On-site adjustment is easy, either by autotuning or by manual displacement setting.

(9) The independent development of the programmable output signal control method can be used for all kinds of traction elevator with moveable car platform.

17、Technical specifications:

1.	Application		Being applicable to all moveable car platform elevators, with an auto inspection range of (2.00mm ≤car platform movement≤10.00mm); manual setting displacement range 2.5~9.9mm (relate to parameter PD)	
2.	Sensitivity		Elevator rated load/200 (With the rated load of 1T, it is 5.0Kg)	
3.	System Error		≤1.5 % (-20~55℃)	In the whole temperature range≤3.0%
4.	Non-Linearity		≤1.0%	
5.	Output Mode:	Solid-state Relay	Programmable universal signal	①3/5 channel programmable output modes are: No load, light load, semi full load, heavy load, rated load, overload (customer may set the changing range freely). ②Each channel can be programmed as dynamic Close or Open contact. ③Contact Capacity:DC/AC 32V/15mA。
6	Working Temperature:		-20~55℃	
7	Relative Humidity:		20%~99%RH	
8	Reaction Time		≤0.25 Seconds	
9	Power Supply:		AC/DC 24(±10%)V / 150mA	
10	Installation Place:		Moveable car platform of elevator	
11	Overall Size:		45×45×90 mm ³	

⚠: The intension exceeding the limit parameters listed above may result in the abnormality or permanent damage to the system.

Promise

- (1) If this system appears any quality problem of product itself in 1 year after delivery, it will be replaced freely (damage of the product seal will not be dealt with)。
- (2) For any requirement of special functions, make it out by mail.
- (3) Any system abnormality in adjustment or operation, please contact our company directly.

Others

1. Accessory	Instruction Manual	1 piece	Fixing Screw set $\phi 4 \times 20$	2 sets
	Inductive magnet $[20 \times 20 \times 4 \text{mm}^3]$	1 piece		

2..address book:

☎ 029-88416613 85565714/8478

📍 7D, Block A, Olympic Building, 14th C
hang An North Road, Xi'an

📠 029-85565714-886

✉ 710068

Technical Support: 0086-18092639752/0086-18092639750