

EWD-L-MSJ4

U s e r ' s G u i d e

(V2. 2)

Xi'an Excellent Electromechanical Co.,Ltd

Table of Contents	Product Overview	1、“EWD-L-MSJ4”The main features of the weighing device	P3
		2、“EWD-L-MSJ4”Installing Method and Working Principle	P3
		3、Controller and load sensor Appearance	P4
		4、Controller interface diagram and description	P5
		5、Controller dimensions	P7
	Installation & Adjustment	6、Button function and instruction code meaning explanation	P8
		7、System debugging methods and instructions (self-learning)	P11
		1.Elevator Rated load rang setting	P12
		2.No-load self-study mode of work	P13
	System Characteristics	3.The amount of self-learning work mode	P14
		8、Multiplier parameter setting and description (auxiliary function)	P15
		9、Technical Specifications	P16
	Promise		P17
	Other		P17
	Attached Drawings	Load sensor dimensions and installation	P18-26

Note: Under any condition, our part is just responsible for the quality of product in the period of guarantee service.

Declaration: For the reason of technology advancement, our company reserves the right of improving product. As for the relevant technical parameters, Please refer to the technical handbook delivered with the product

System Overview

1.“EWD-L-MSJ4”The main features of the weighing device:

1. The normal work of the product, the direct display of the car internal payload, self-learning process is simple.
2. Intelligent programming and control process, according to different customer needs, the controller output of the 4-way switch signal in any one of the signal corresponding to the percentage of load and dynamic / dynamic output adjustment, and the output simulation The amount of the way to modify.
3. Intelligent sensor equipment: the use of high-precision load intelligent sensor, direct detection of car load changes;
4. Wide measurement range (payload can be manually set according to demand), high positioning accuracy, intelligent temperature compensation.
5. Electrical performance in line with the "International Electrotechnical Commission (IEC)" standard requirements;
6. The core uses high precision load cell and high performance single chip microcomputer. Can set all the working parameters.
7. Unique programmable output signal control mode, suitable for a variety of activities of the car to mention the elevator weighing signal on the demand.
8. With the working parameters of artificial fine-tuning correction ability, the elevator can be modified after the artificial correction, so as to achieve the purpose of accurate measurement.
9. Unique sensor + controller design structure, wiring is simple.
10. Everything from the user point of view, easy to install, easy to debug, reduce the use of additional costs, performance and high cost.

2.“EWD-L-MSJ4”working principle:

With the development of elevator technology, the influence of elevator weighing device on its performance has reached a point that cannot be ignored. Elevator The demand of high precision, high reliability and multi-function of weighing device is imminent. In sensor technology and microcomputers constantly The development of today, the use of high-precision sensors to detect the elevator car due to load changes caused by electrical signals. High


precision sensor: The serial communication technology is used for long-distance and high-precision lossless transmission. The MCU is used in the controller to carry out scientific operations Therefore, the final precise display of the payload in the car directly on the controller digital tube, to achieve the elevator car payload weighing Heavy working function.

3.Controller and load sensor Appearance :
Elevator load weighing device“EWD-L-MSJ4”Controller

MODEL	EWD-L-MSJ4
Weighing device Control by EWD-L-MSJ4 The physical appearance of the device	

4.Controller interface diagram and description:

1.Controller interface diagram

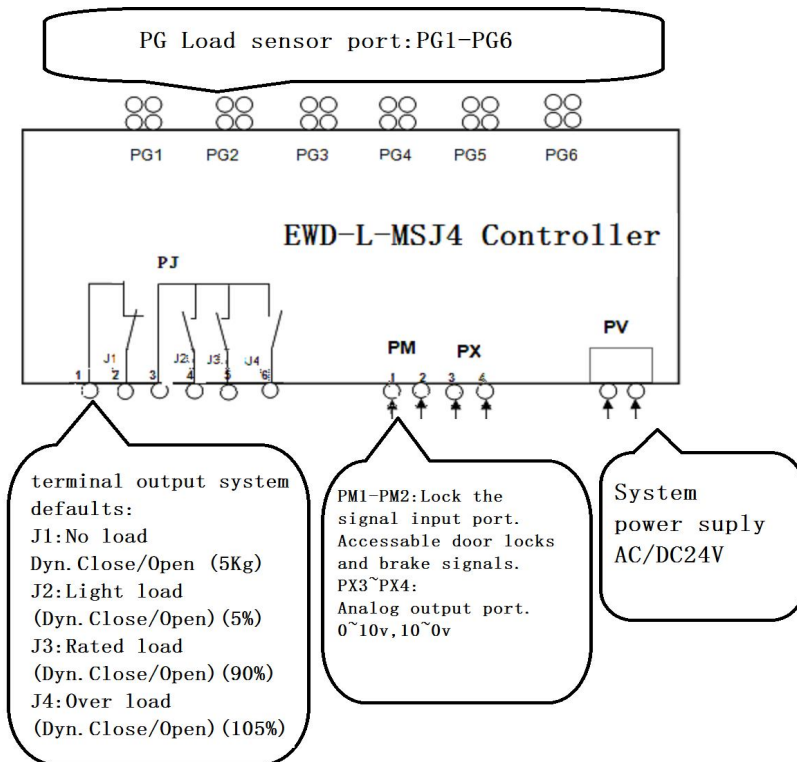


2.Controller port details:

			Function	Explanation	
PJ	Switching	1	J1 Relay COM port	With the P2 to produce effective logic	1. Function : Be programmed as“J1 ~ J4”(No load - over load)output signals to participate in elevator logic control 2.Max loading Capacity: DC/AC 48V/500mA
		2	J1 Relay Out put	system default“J1”5Kg No load Dynamic open output;	
		3	J2、 J3、 J4 Relay com port	With P4.P5.P6, to produce effective logic	
		4	J2 Relay Output	system default“J2”: Light load Dyn. Close output	
		5	J3 Relay Output	system default“J3”: Related load Dyn close output;	
		6	J4 Relay Output	system default“J4”: Overload Dyn,open output;	
PM	Lock	1	Lock signal COM prot	Note the voltage difference and the connection polarity when connecting	
		2	DC+24V lock signal , Can access the door lock signal and brake signal		
PX	Analog	3	0~10V;10~0V;Analog voltage output	Used for pre-torque compensation of the drive system	
		4	COMConnect the governor to the analog common		
PV	Power supply	System power supply port: AC/DC 24V / 200mA			
PG	Sensor connecti on port	PG1PG2 PG3PG4PG5 PG6	EWD-L-MSJ4 controller , 4 sensors or 6 sensors can be used as needed.		

It is absolutely impossible to connect the output port other than the "PV" device directly to the external power supply, which may cause permanent damage.(Note:PX and PM port with Polarity requirements and voltage rating requirements)

5、Size of Controller:

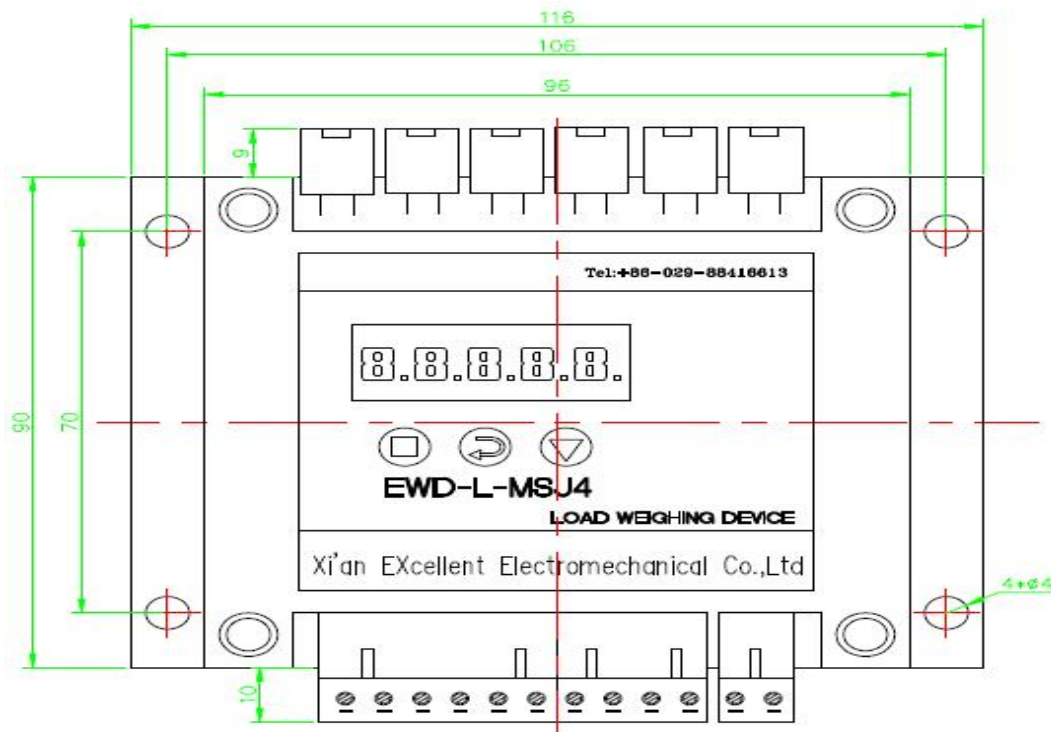

6.Button function and Instruction parameter code meaning description:

Note: (1)Press the button, the meaning is to press the button to release.

(2) hold down the button, meaning that the button is pressed for a long time as required.

1.Button Meaning and Function Description:

No.	Button icon	Function	Explanation
1	【■】	Set and confirm Button (SET)	Set a parameter and confirm the internal data function
2	【↶】	Switch / cursor shift utton(SHIFT)	Used to switch the digital display digit
3	【▼】	Data increase Button (ADD)	Change the internal value of the parameter

2.Button to use method description:

(1)Set and confirm button **【■】** Instructions:

When power is displayed, press it **【■】**, Enter the parameter setting status, by **【↶】** and **【▼】** button Enter the setting parameter, Can be set accordingly。 Finish setting , press **【■】** button check, Save the parameters。

(2)Switch / cursor shift buttons **【↶】** Instructions:

In the parameter setting state, press once**【↶】**, The cursor moves one by one , to the last one,Press the toggle / cursor shift button **【↶】** And cycle back to the first place.

(3)Data increase button **【▼】** Instructions:

In the parameter setting state, press once**【▼】**, Add one to the cursor bit data, add the maximum value of the set data and then cycle back to the minimum value of the data.

3. With the decimal point of the parameters of the process of adjusting the use of key examples:

After powering on the product, press **【■】** button to enter the instruction setting state. When "00000" is displayed, press **【↶】** button to move the flashing cursor to the last digital tube. Press **【▼】** key to adjust the digital display to "00001", press **【■】** button to enter the command parameter setting state, digital display "dd - c", press **【■】** buttons to enter this Parameter modification mode, display "00001" means that the decimal point is 1 bit. Press **【↶】** and **【▼】** to change the digital tube display to "00002", press **【■】** key to confirm this parameter is modified, the digital tube decimal point will move one by one. (Note: other instruction item parameters can be modified and confirmed in accordance with this method.)

3. Instruction Parameter Code Meaning Description:

No	Instruction parameter code	Function code	Code default data	Function and explanation
1	00001	dd--c	00001	Display the decimal point position setting, the factory default for the 1-bit display "00001", adjustable 4 decimal point adjustment
2	00002	Lc--01	1000.0	The amount of load range set, according to the different capacity of the elevator directly to the manual set to the load range can be.
3	00003	Bj--1	0005.0	J1 for the no-load signal output corresponding to the car load, the default setting elevator car load 5.0kg:
		Bj--2	0005.0	J2 for the light load signal output corresponding percentage, the default setting for the amount of 5% output action,

		BJ--3	0090.0	J3 for the full load signal output corresponding percentage, the default setting for the amount of 90%,
		BJ--4	0105.0	J4 for the overload signal output corresponding percentage, the default setting for the amount of 105%,
4	00004	BJ-HL	BJ1-L	J1 relay dynamic output, dynamic (L)
			BJ2-H	J2 relay moving output, moving together(H)
			BJ3-H	J3 relay moving output,moving together(H)
			BJ4-L	J4 relay dynamic output, moving together(H)
5	00005	Da--c	Da-00	Analog output mode corresponds to P9 ~ P10 terminal port output 0 ~ 10V,
			Da-01	Analog output mode corresponds to P9 ~ P10 terminal output 10 ~ 0V,
6	00006	HELP-	---01	Restore factory settings
7	00007	B2--c	B2-01	Multiplier parameter setting, multiplied by the amount of 1 times, "01 ~ 99" value corresponding to the amount of 1 to 99 times the amount of adjustable; ★ multiplier parameters to be modified after the completion of self-learning after the completion of confirmation

8	00008	L-H-2	LL--1	The controller learns the no load parameter;
			HH--1	The controller self - learns the load parameter
9	00009	I-h-2	1000.0	Fine-tuning the coefficient setting to fine-tune the learning results


7.System debugging methods and instructions (self-learning):

(Here to lift the amount of 1000Kg as an example to describe the load range setting and "no load and the amount of two self-learning" process)

Before the system debugging:

- ①: Products must be in strict accordance with the "EWD-L-MSJ4 user manual" for self-learning, otherwise it will cause the product can not be used and product measurement accuracy is not accurate.
- ②: Before commissioning, it is necessary to specify the weight of the car. The weight of the truck can not exceed the total range of the sensor. Otherwise, the sensor will be damaged and the product will not be used.


1.Elevation range setting: Note: ①1. Product digital tube display the default decimal point to 1, the unit is Kg, For example :the case shows "1000.0", that is,

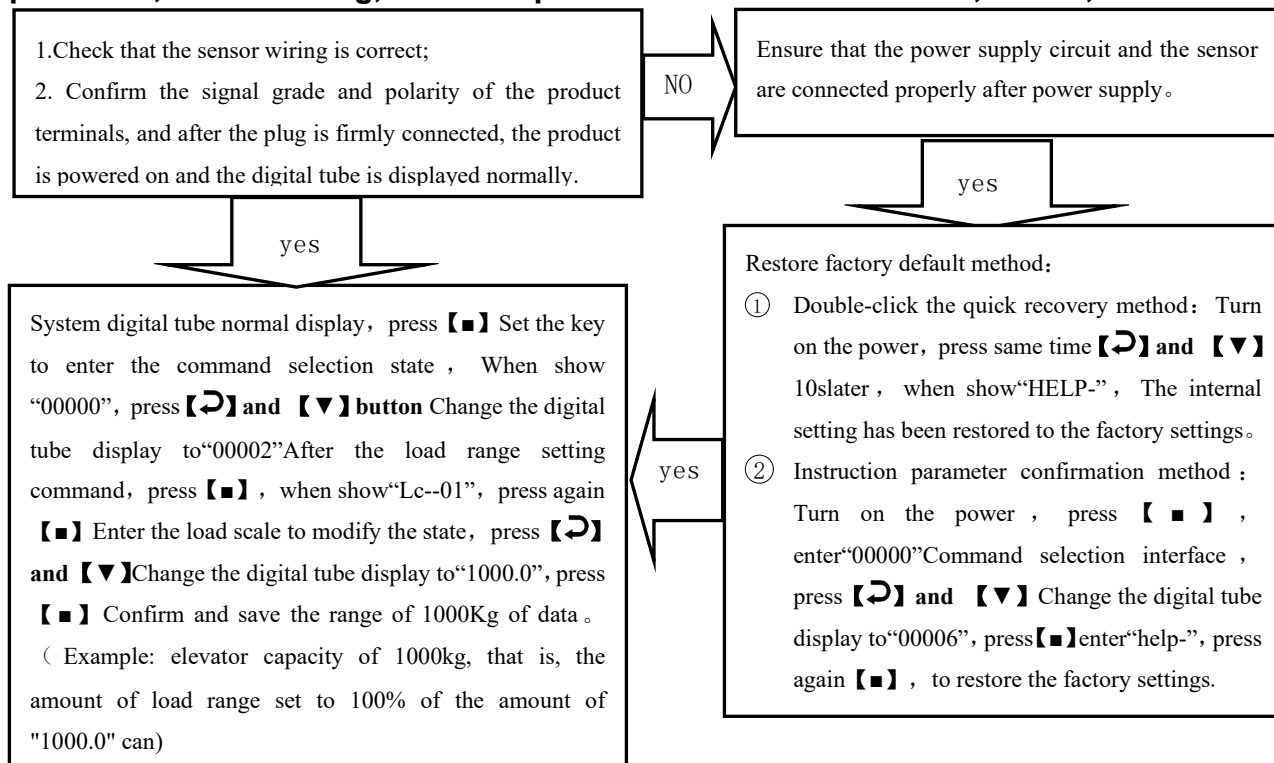


2.No-load self-learning process:

Note: ① product no-load self-learning before the car must ensure that there is no load and debris, otherwise it will lead to a greater error in the weighing effect.

② product no-load - the two-point self-learning process, must be "LL-01" first study no-load, "HH - 1" retraining, otherwise it will lead to the product can not be used

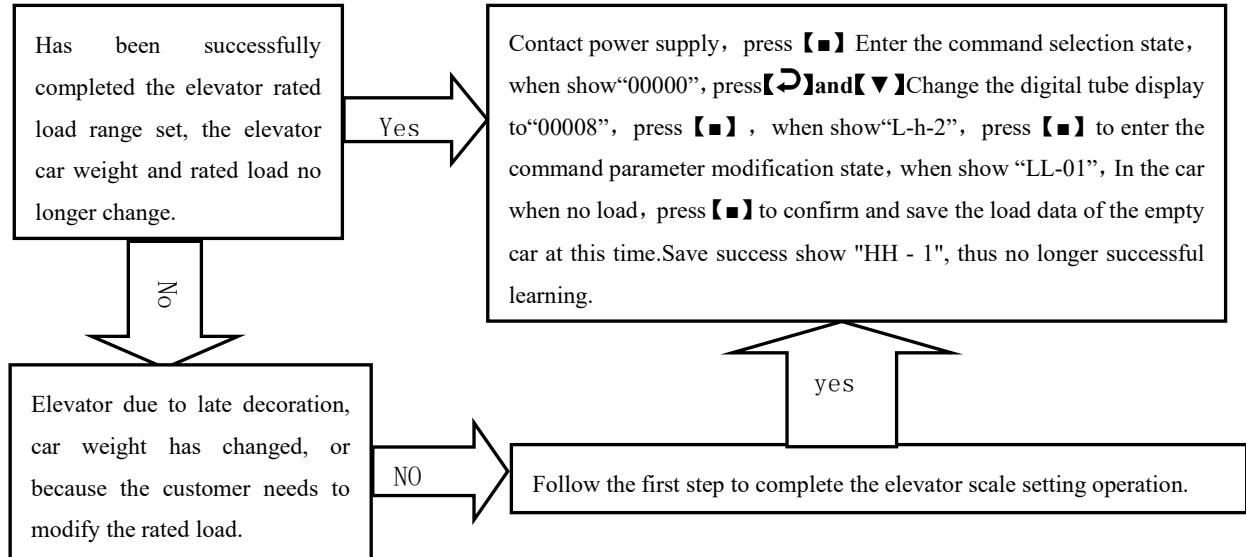

3.Lift the amount of self-learning process:

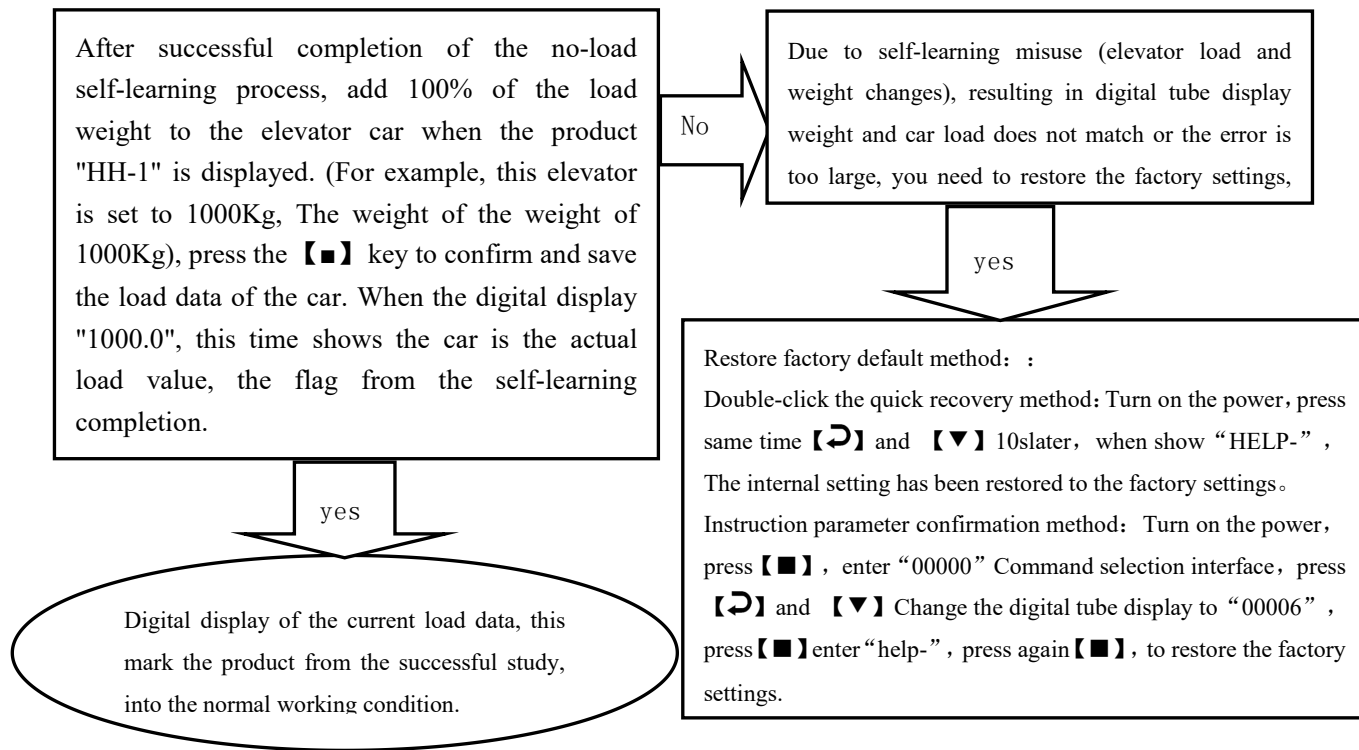

8、Multiplication parameter setting process description (auxiliary function):

Note: Repeated parameter debugging must be in the product after the completion of Chapter 8 product self-learning process before they take effect. Multiplier parameter adjustment range of "01 ~ 99", that is, the product multiplier for the amount of 1 to 99 times the amount for customers to choose. The product default multiplier parameter value is 1 times the amount of time to restore the factory settings after the product multiplier parameters are restored to the product default multiplier parameter value of the rated load of 1 times.

1.Multiply parameter setting process:

When the system is displayed normally, Press **【■】** to enter the instruction selection state, and when "00000" is displayed; press **【↶】** and **【▼】** button to change the digital tube display to "00007". "Press **【■】** key to display "bz - c", press the **【■】** key again to enter the command parameter to modify the state, the product digital hanging display "bz-01" (after the two digital display "01" That is doubled, for example

2.for example:

Has completed the amount of 1000kg self-learning process of the product, into the normal working condition. At this time digital tube Display "1000.0" for the current car payload value of 1000kg. According to the above parameter setting process will be multiplied parameter value is set to "bz-05", and successfully saved 5 times Parameter value. At this point the product light load action load value from the original $1000\text{kg} * 5\% = 50\text{kg}$ also doubled, this When the product in the $1000\text{kg} * 5 * 5\% = 250\text{kg}$ output light load switch signal. And so on, the load signal and The load value of the overload signal is also increased by 5 times. The output of the product will also be based on the load of the elevator Corresponding to 5 times the value of the analog output changes.

System Features

9、Technical Specifications:

1.	Application:	applicable to all fixed car platform elevators	
2.	Floor Compensation	Artificial changes in learning errors and fine-tuning.	
3.	Sensitivity:	Elevator Rated Capacity/1000 (The rated capacity is 1000kg, and the sensitivity is 1kg) [This data may be affected by elevator mechanical performance.]	
4.	System error:	$\leq 0.25\%$ (5~40°C)	
5.	Non-Linearity:	$\leq 0.25\%$	
7.	Output Mode:	Programmable 4-way switch signal:	①4-channel programmable output modes are: No load, light load, rated load, overload (customer may set the changing range freely). ②Each channel can be programmed as dynamic Close or Open contact. ③Contact Capacity: DC/AC 48V/100mA。
		Linear analogue:	Full compensation range 0~10V;10~0V
8.	Ambient Temperature:	: -20~55°C	
9.	Relative Humidity:	20%~90%RH	
10.	Reaction Time:	$\leq 0.25s$	
11.	Power supply:	AC/DC24($\pm 10\%$)V / 200mA	
12.	installation Place:	Load sensor: under movable car platform。 Controller: Control Cabinet in machineroom	
13.	Overall Size:	Controller parts: 115×90×40 mm ³	

☛*: The intension exceeding the limit parameters listed above may result in the abnormality or

permanent damage to the system.

Promise

- (1)If this system appears any quality problem of product itself in 1 year after delivery, it will be replaced freely (damage of the product seal will not be dealt with) 。
- (2)For any requirement of special functions, make it out by mail.
- (3)Any system abnormality in adjustment or operation, please contact our company directly.

Other

1. Packing list:	EWD-L-MSJ4 Controller	1set
	Φ4×20mm <i>Fastening Screw sets</i>	4sts
	Load sensor	Set this parameter based on user requirements
	User's Guide	1piece

2.Address

Xi'an Excellent Electromechanical Co.,Ltd
TEL : (029)88416613 85565714/8478 A D D : 7D, Block A, Olympic Building,
14th Chang An North Road, X
i'an, Shaanxi,China.



FAX : (029)85565714-886
Technical: 18092639750 18092639752

Attached document:


Load sensor dimensions and installation

1. XCL-Y/8625 loading Sensor size and installation method


1.1 size (range:12KN、22KN、30KN、40KN、50KN、70KN)

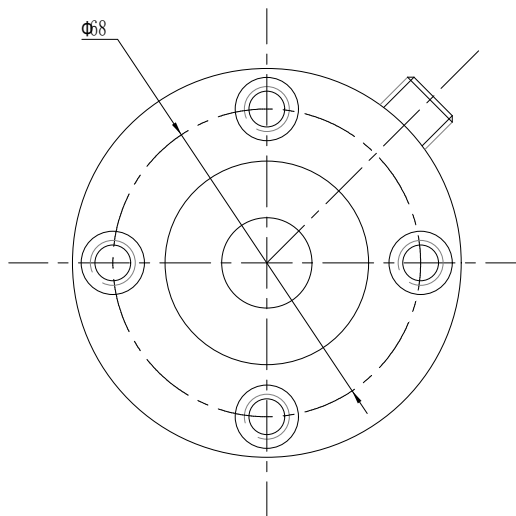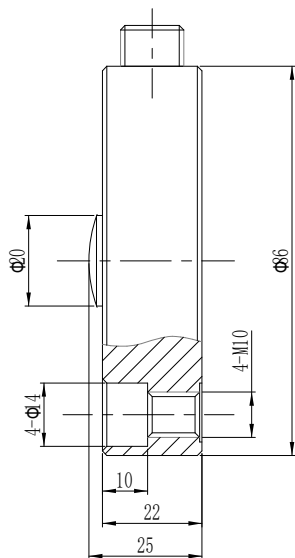

Bar size chart


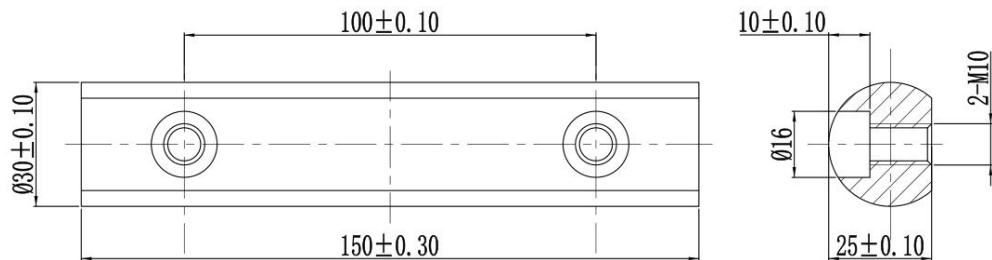


1.2 install method

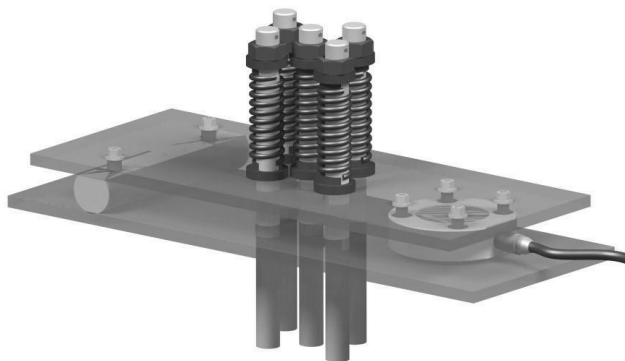


2. XCL-ZL/W Standard character “王” tension sensor size and installation method

2.1 Size of load sensor

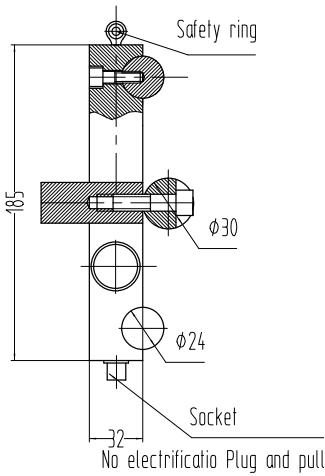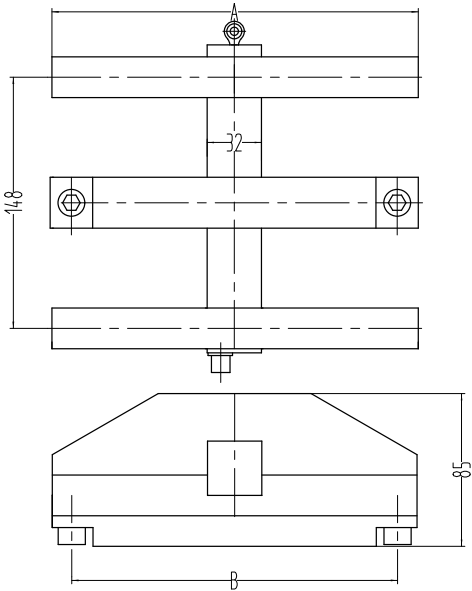


Range	Size	
	A	B
KN		
20	216	192
50	260	238

2.2 install method

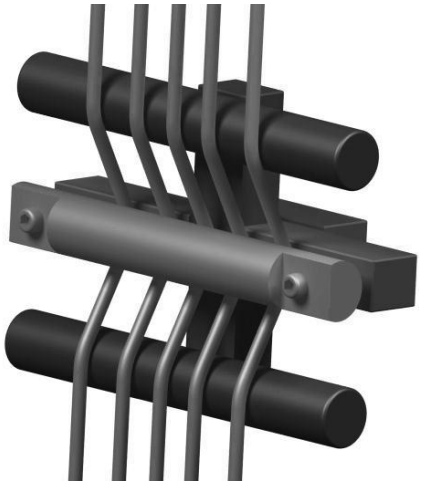


3.XCL-T/A Standard character “—” load sensor size and installation method

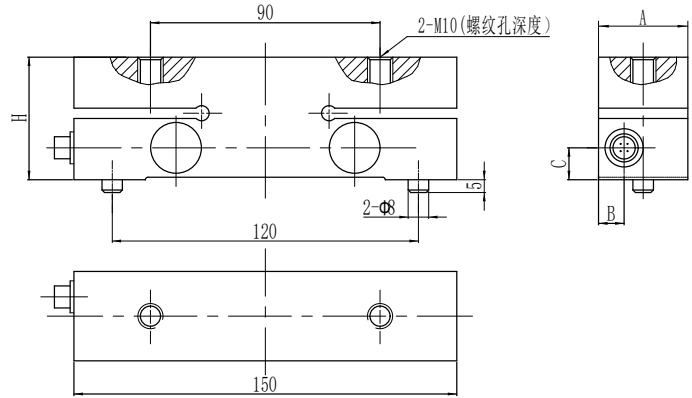

Range	Size				
	KN	H	A	B	C
10	41	25	8	12.5	Through-hole
15	41	25	8	12.5	Through-hole
20	41	25	8	12.5	Through-hole
30	48	35	10	12.5	Through-hole
50	48	35	10	12.5	Through-hole
70	60	35	8	17	18
100	60	35	8	17	18
150	70	35	8	21	18


3.1 load sensor size

3.2 install method

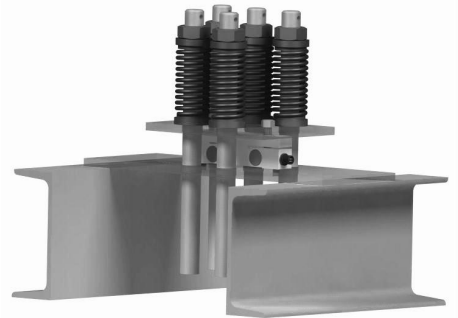

4.XCL-T/B Standard character “—” load sensor size and installation method

4.1 load sensor size

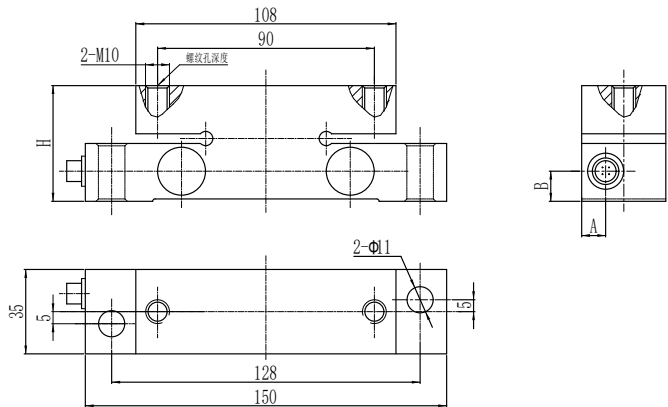

Range	Size			
	KN	H	A	B
30	48	10	12.5	Through-hole
50	48	10	12.5	Through-hole
70	60	8	17	18
100	60	8	17	18
150	70	8	17	18


4.2 install method



5.XCL-ZL/P2 load sensor dimensions and installation method:

5.1 size (range : 5KN 、 8KN)


5.2 install method

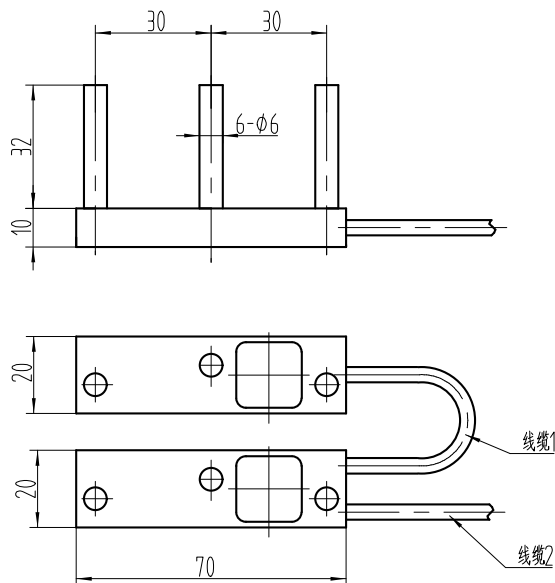

6.XCL-ZL/P3 load sensor dimensions and installation method:


6.1 size (range : 5KN 、 8KN)

6.2 install method

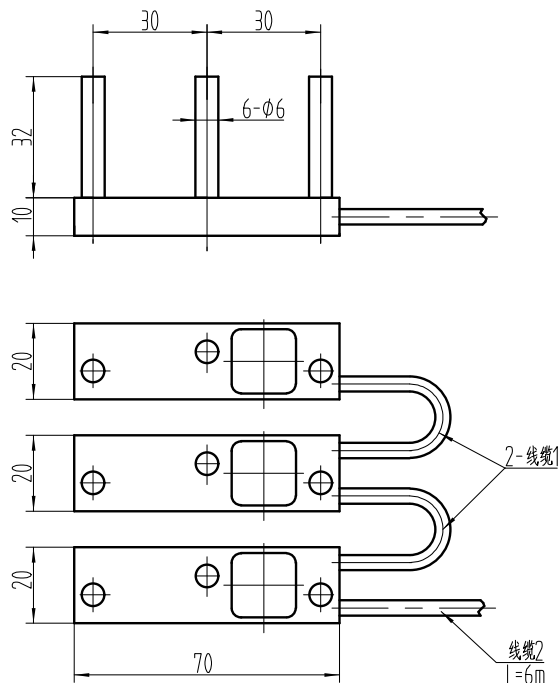


7.XCL-YH/7910 load sensor dimensions and installation method

7.1 size (range : 10KN)

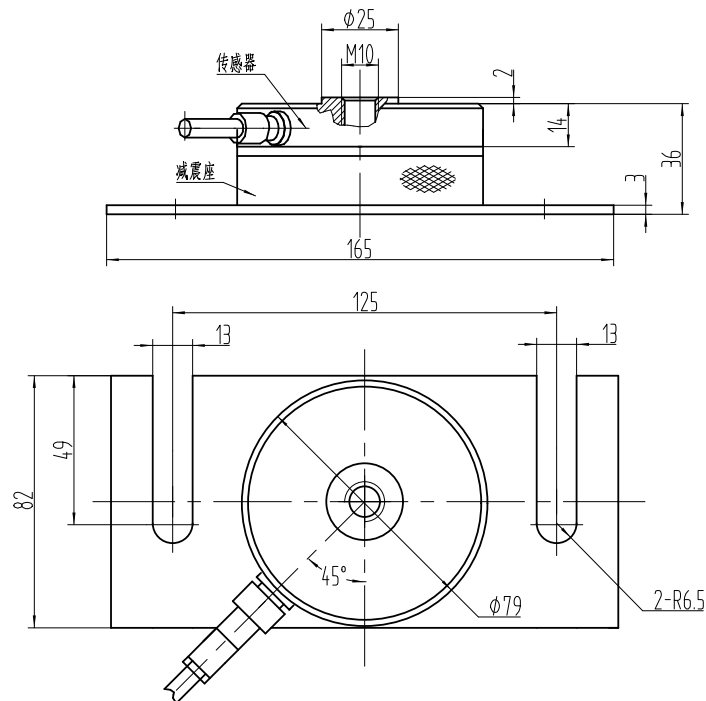

7.2 install method

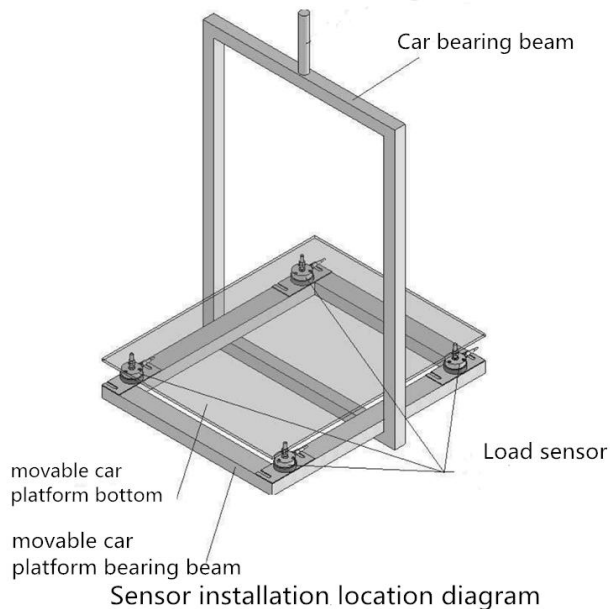

Precautions for installing controllers and sensors

1. The controller part should be installed in the control box on the top of the car, and it is best not to be close to the elevator electronic weighing device transformer, governor and other equipment. In all cases, sensors and controllers shall be installed away from heat sources;
- 2.4 Sensors installed at the bottom of the car, and the connection between the controller, it is better not to 110V, 220V and other power supply in the same wiring slot;
3. Connect the sensor wiring port to the PG port of the controller, and connect PV to the power cable according to the requirements of the weighing device. Be sure to pay attention to the voltage level;
4. Power on the weighing device after the check is correct, and the controller should be displayed in the corresponding working mode. the corresponding working mode.